



# Boxford Laser Cutter/Engraver

## Quick Start Guide – RDWorks Software Installation

1. The machine software is shipped on a memory stick.  
The file structure will be similar to the example shown below.

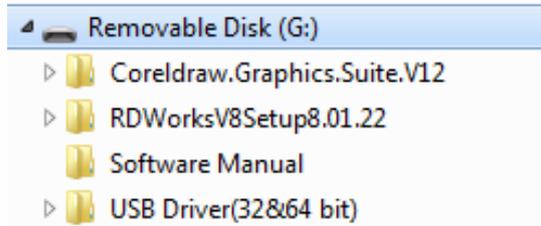

2. Open the folder **RDWorksV8Setup8.\*\*.\*\***  
Double click of the File **RDWorksV8Setup8.\*\*.\*\*.exe**  
The window below is shown.

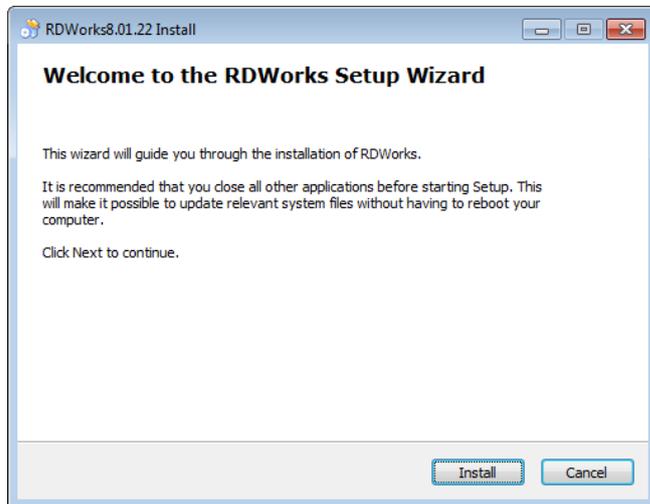

Select **INSTALL** to begin the installation.

3. After a file copy, the window below is shown.




Ensure the settings are as per the window above with the exception of **BGL230** users who should select '**Top Left**' as the Origin position.

4. The default installation path will be **c:\RDWorksV8**

if you want to specify a different path, check the **Locate Install Path**' check box now.


5. Select the **Install USB driver** option.

If the machine is NOT connected to the PC, you will be prompted to connect it now, as shown below.

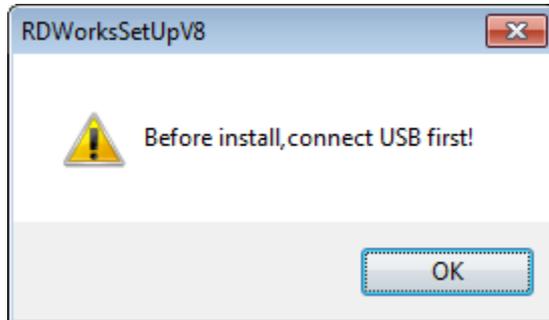

Select **OK**


Confirmation of successful installation is displayed.

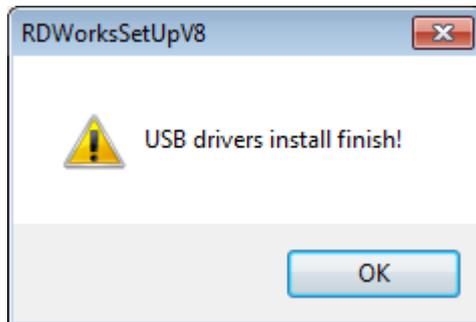

Select **OK**

6. Select the **Install** option and if prompted, select your preferred installation path now.

Once the installation is complete, a confirmation is displayed.

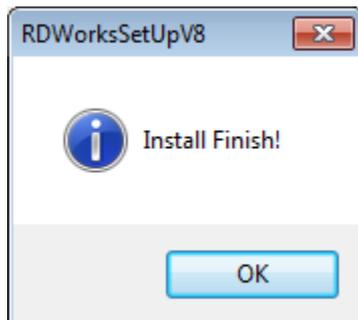

Select **OK** and then **Exit** to finalise the installation.

7. Browse to the contents of the memory stick and locate the folder **Cutting Parameters** located inside the **RDWorksV8Setup8.\*\*.\*\*** folder then open the folder that corresponds to your machine model. Copy the file **Param.lib** (it may only display as **Param**) into the RDWorks software installation folder which would be **c:\RDWorksV8** by default.

8. The RDWorks software installation is now complete. See our next quick start guide in the series titled **RDWorks – The Basics**